

FEEL THE HEAT!

Can-Am Maverick RacePace Nerf Bar Installation Instructions

Part # **01-2102** 2013-2014 Maverick RacePace Nerf Bars (set of 2) – Black

Part # **01-2103** 2013-2014 Maverick RacePace Nerf Bars (set of 2) – Red

Part # **01-2119** 2015+ Maverick RacePace Nerf Bars (set of 2) – Black

Part # **01-2120** 2015+ Maverick RacePace Nerf Bars (set of 2) – Red

Congratulations on your purchase of the DragonFire RacePace Nerf Bars. Designed to give your Maverick that racer style as well as protection, these have been built with the serious off-road driver in mind. Customized mounts allow for full side protection with minimal clearance loss. Accelerate your Maverick to RacePace today with DragonFire!



- Read and understand these instructions before installing product
- This product does not provide roll over protection
- Product does not guarantee protection from body damage
- Intended for recreational use only

Tools Required

1/2" Wrench

9/16" Wrench

7/16" Socket and Wrench

Ratchet

Disclaimer

Off road activities can be hazardous and could lead to injury, dismemberment, paralysis and death. No warranty of representation is made as to the products ability to protect the user from any injury or death. The user assumes that risk. The acceptance and /or use of this merchandise purchased from DragonFire by the customer hereby shall release DragonFire from any and all liability pertaining to the use of such merchandise.

Step 1: Place vehicle on a flat and level surface. Place gear selector in "Park" and remove keys from the ignition.

Step 2: Prior to installation, remove the washer and nut from the rear mount of Nerf bar. Set hardware aside it will be re-used. (Figure A)

Step 3: Locate the middle mounting tab extensions. Attach them to the center nerf bar mounts using supplied hardware. Leave loose for adjustment and alignment to be done when mounts are fastened to frame. (Figure B)

Step 4: For 2013 and 2014 models, slide adapter onto nerf bar end and secure with supplied 1/4-20 hardware. Torque to 10 ft-lbs (120 in-lbs) (Figure C)



Step 5: Install the supplied U-nuts into factory cut-outs located on underside of vehicle rocker panel. There will be one located towards the front tires (Figure D) and one towards the rear tires (Figure E).

Step 6: Insert front step-sleeve into forward-front frame rail. (Figures F for 2013-2014 models & G for 2015 and newer models) Slide inward until it is fully seated against frame rail.

Step 7: Rear Nerf bar mount is to be aligned with factory rear mounting tab located just in front of rear a-arm mounts on factory frame rail. (Figure H) Secure with hardware previously removed in step 2 but do not tighten/torque until step 8 is complete.





Step 8: Install supplied hardware to secure the center mounting tabs of Nerf bar to front and rear u-nuts previously installed on frame in step 5. Torque to 12 ft-lbs (144 in-lbs)

Step 9: Tighten tab extension hardware to 12 ft-lbs (144 in-lbs).

Step 10: Go back and torque the rear mount hardware to 18 foot-pounds. Double check that the rear and middle mounting points are all tightened to the torque specs noted above.

Step 11: Repeat installation process (steps 2-10) for opposite side of vehicle.

Step 12: This completes installation. Time to ride and enjoy!

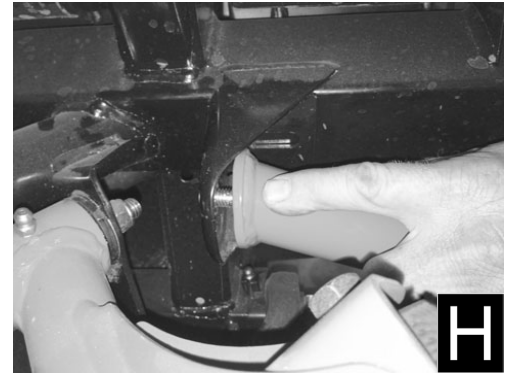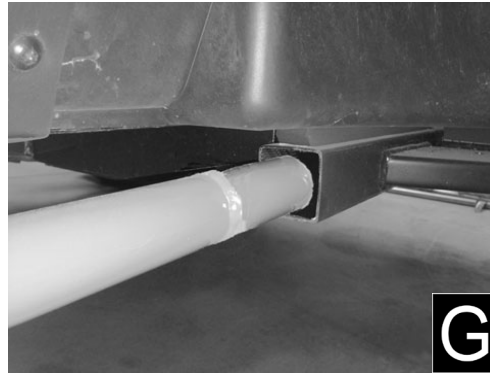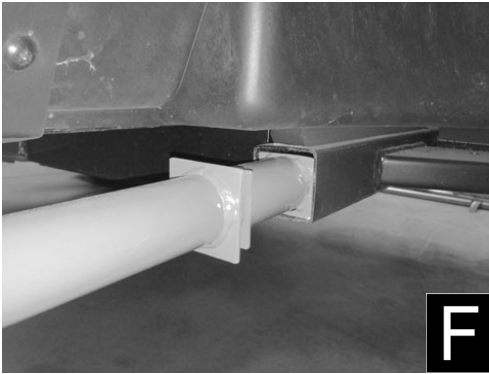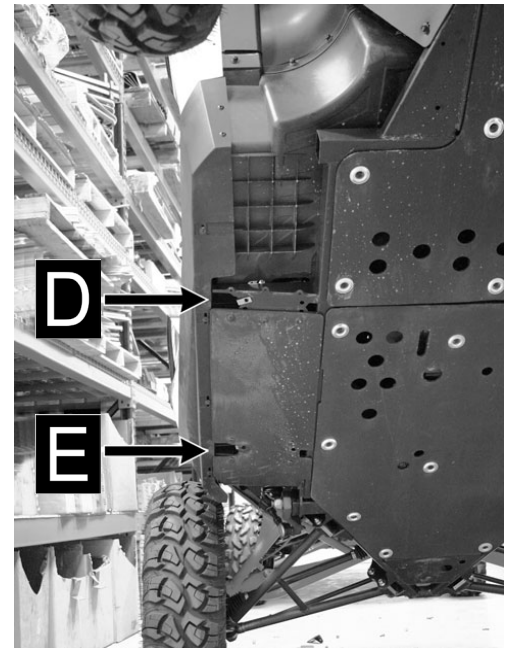

ProTip: Periodically check all hardware and re-tighten if needed.

For further assistance, please contact your authorized DragonFire dealer.