

Rear Cargo Rack - Can-Am® Maverick X3 Instructions

hmfracing.com/equipment/can-am-maverick-x3/rear-cargo-rack-can-am-maverick-x3/installation


Installation

1. Remove the 2 small torx head screws and nyloc nuts from the back of the bed.
2. Install the 2 clamps on the cage tubes with the threaded boss toward the inside. Leave these loose enough so that they can be adjusted to fit the cargo rack.
3. Set the cargo rack in the bed and install the original small torx screws and nuts so that they pass through the rear cargo rack mounts and the bed.



4. Line up the previously installed clamps with the cargo rack and install the supplied allen head bolts.



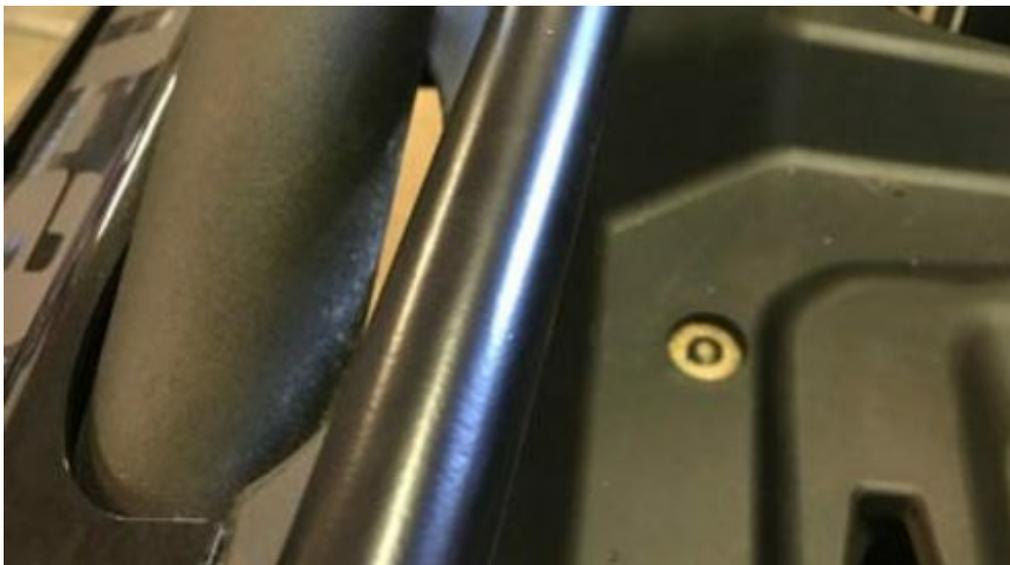

5. Tighten the clamp bolts.

Discussion

Hardware

-  (2) Bolt - Allen - M8-1.25 X 35
-  (2) Clamps - Accessory - Can-Am® Maverick X3